

MYMO

User Guide


mymoshop.com

1 Introduction

1.1 MYMO Specification

Network: GSM 900/1800 Dual Band
Dimensions: 87.5mm x 59mm x 21.8mm
Weight: 60g (with battery)
Talk time: 2-4 hours
Standby: 60-100 hours
Battery: 3.7V / 550mAh Li battery

1.2 Appearance

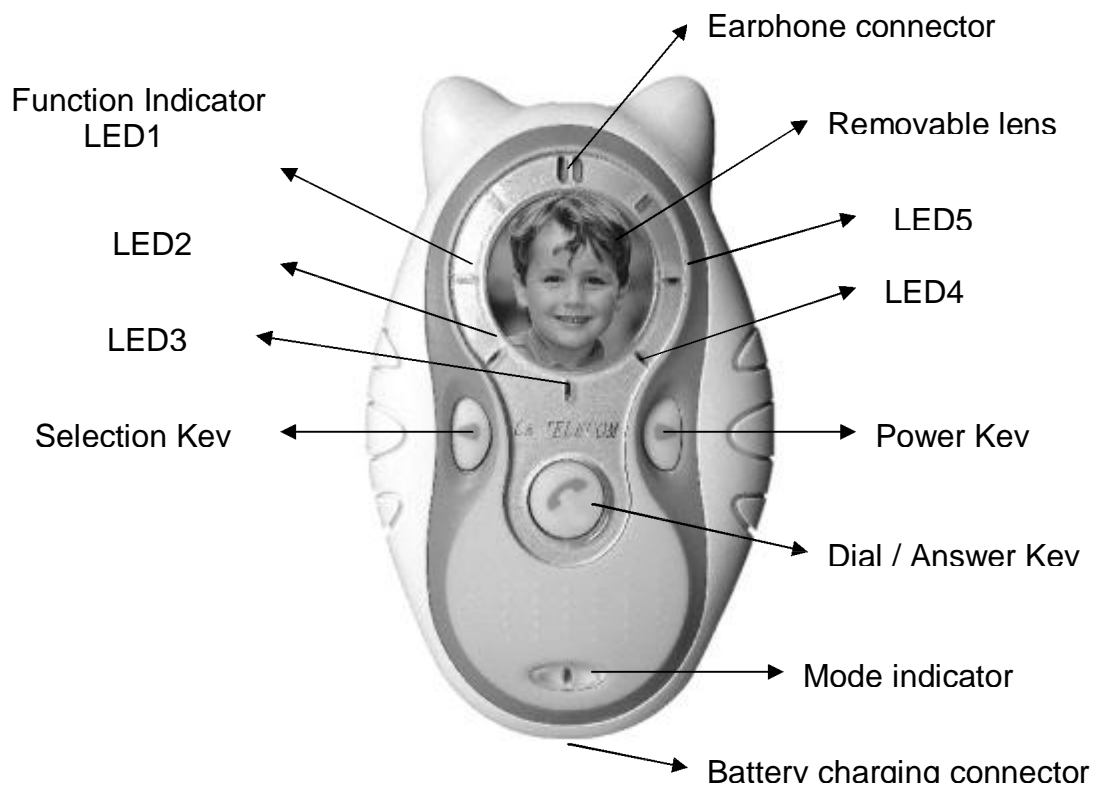

1.3 Power Key

The power key powers the phone on / off. You can also use the power key to reject calls and cancel functions.

1.4 Selection Key

This button is used to select the desired number to call and choose ring tones.

1.5 Dial / Answer key

Use this button to make or answer a call and to select the desired ring tone.

1.6 Indicators

1.6.1 Mode Indicator

This LED is used to inform you of the network and battery status. The LED will light as follows:

Standby / Network coverage	ONE flash every 8 seconds
No Coverage	TWO flashes every 8 seconds
Low Power	THREE flashes every 4 seconds. This will occur four times.
Charging	The LED will flash FIVE times every four seconds until charging is complete or the charger is disconnected

1.6.2 Function Indicator

This LED shows you incoming or outgoing call status:

Talking	ONE flash every 2 seconds
Incoming / Outgoing call	FOUR times every four seconds


2 Installation Instructions

2.1 Installing the SIM card

You need to store the telephone numbers prior to inserting the SIM card. Please see section 3 for details.

Please ensure the phone is switched off and is not being charged before the SIM is inserted.

- o Remove Battery
- o Place the SIM card into the SIM card holder with the chip side facing downward. Please ensure the SIM card is pushed to the left to ensure a tight fit.
- o Secure the SIM card by sliding the metal leaf over the SIM.

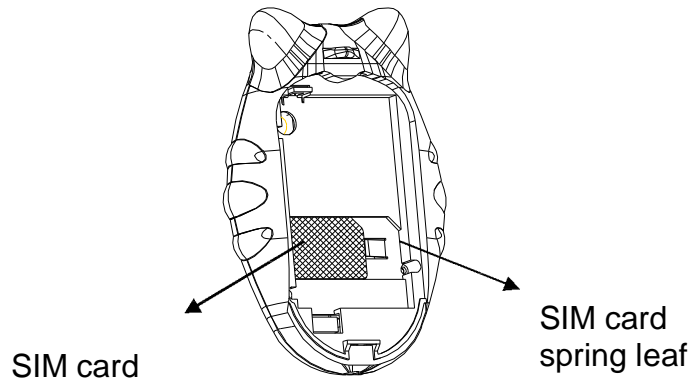


2.2 Removing the SIM Card

Please ensure you have switched off the phone before the following steps:

- o Remove the back cover and battery
- o Slide back the metal leaf to the right and take out the SIM card.

2.3 Installing the Battery

- o Open the back cover
- o Insert the battery plug into the battery connector and push the lower end of the battery into its holding position. Gently lower the upper part of the battery until the spring leaf locks it. Replace the back cover. (see 2.5)

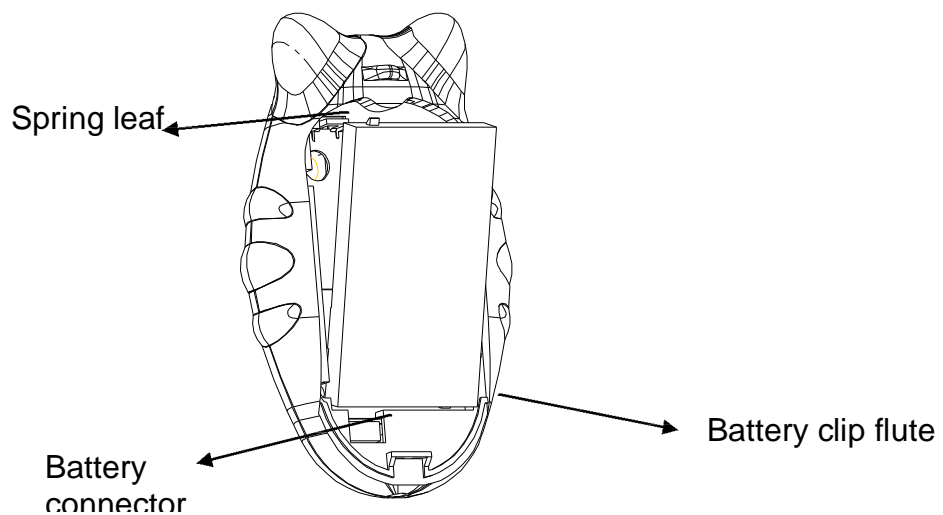

2.4 Removing the Battery


Be sure to power off your phone first.

- o Slide open the back cover
- o Press the spring leaf outwards and take the upper section of the battery out.
- o Remove the battery plug and then remove the complete battery.
- o Replace the back cover. (see 2.5)

2.5 Installing the back Cover

Please ensure the phone is powered off before installing the back cover.

Push the back cover along the back of the phone until it clicks into place.

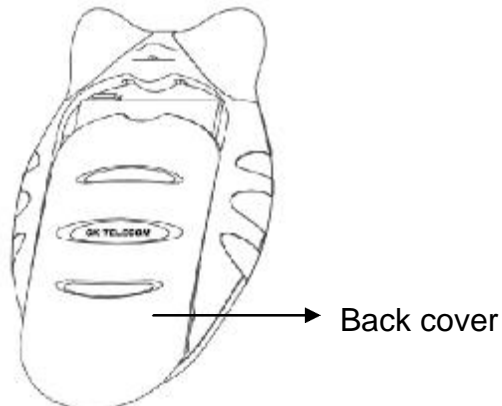

2.6 Removing the Back Cover

Please ensure the phone is powered off and push the cover down and out towards the bottom of the phone.

3 Operating Instructions

3.1 Storing Phone Numbers

MYMO has the ability to call 5 numbers stored on the SIM card. As the MYMO has no keypad, please insert the SIM card into a standard mobile phone first.

Store numbers as normal, inserting the letter 'H' and its position (1-5) prior to the name.

For example, you could input 'H1MUM' and save the appropriate number for the first telephone number saved. For position 2 you would save as 'H2DAD' and save that number.

Once you have stored all 5 name and numbers, return the SIM card to the MYMO.

*Please note – MYMO will not be able to call the desired numbers if they are not stored as instructed. Please ensure you insert the H and the stored location number (1-5).

Position 1 must be a mobile number to change the phone PIN settings. (See 3.9)

3.2 Switching on Your MYMO

Press and hold the power key until the mode indicator LED lights. The LED will continue to flash until the phone is logged onto the network. It will continue to flash as per 1.6.1. If there is no SIM card in the phone you will hear a clicking noise to indicate there is no network available.

Before powering on, please ensure you have read 3.9 regarding the MYMO and SIM PIN code.

If LED 1,2 and 3 light when the phone is switched on, your SIM card is blocked and you may need to contact your Service Provider.

3.3 Switching Off your MYMO

Press and hold the power key until the mode indicator lights up. The LED will go off when the power down procedure is complete.

3.4 Making a Call

Once switched on, press the 'selection key' once to light LED 1. This light refers to the number stored at position 1 on the SIM. If this is the number you wish to call press the 'Dial key' within 10 seconds. If it is not, then press the power key to return to standby mode.

If you wish to call a number stored at another position, keep pressing the selection key until the appropriate LED is lit. For example, LED4 corresponds to the fourth number stored on the SIM.

If position 1 is empty on the SIM but you have stored a number in position2, the LED 2 will light when you press the selection key.

EMERGENCY CALL: WHEN THE PHONE IS ON STANDBY MODE YOU CAN DIAL THE EMERGENCY NUMBER BY PRESSING THE DIAL / ANSWER KEY FOR 5 SECONDS.

3.5 Incoming Calls

When the phone is in standby mode and it receives an incoming call from one of the five numbers stored on the SIM, the appropriate LED will flash as well as the phone ringing or vibrating.

If the incoming call is from a number not stored on the SIM, All the LED lights will flash.

3.6 Answering a Call

To answer an incoming call, press the 'Dial / Answer' key. You can press the 'power key' to reject it.

3.7 Phone Settings

When the phone is switched on, you can preview the ring tones by pressing the Dial / Answer button. There are four ring tones to choose from, plus a vibra alert. You can preview them by continually pressing the dial / Answer key. When you want to select the desired ringtone, just press the selection key when the appropriate LED is lit.

3.8 Battery Charging and Low Power Indication

When battery power is low you will hear a beep to indicate this. The mode indicator will flash three times every four seconds to inform you of this. The phone will also beep when you insert the charger into the phone. The mode indicator will flash five times every four seconds to show charging is taking place. This will continue until either the charging unit is switched off, or the battery is fully charged.

3.9 MYMO PIN Code Setup

MYMO has a PIN (Personal Identification Number) built into the phone. The SIM card that you insert into the MYMO must have the same PIN code as the phone. The default PIN for the MYMO is 12345678. This needs to be changed to the same PIN as your SIM card. You should be able to find out your SIM PIN code from your SIM pack or from your Service Provider.

To change the default PIN on the MYMO to the same PIN as your SIM card, you need to send an SMS (Text message) from a normal handset to the MYMO that contains your new SIM card in the following format:

Setpin + OLD PIN+ NEW PIN+ NEW PIN.

If your SIM has a PIN of 0000, then you would send the following SMS:

Setpin+12345678+0000+0000

You will receive an SMS confirmation to the normal handset from the MYMO confirming the PIN change.

Attention:

- You must send the SMS from the mobile number that is stored in location 1 on the SIM.
- The MYMO PIN and the SIM PIN must match. You can alter the SIM PIN at any time by inserting it in a normal handset.
- If you switch on the handset and the MYMO PIN does not match with the SIM PIN, the LED 1 and LED will light. You must then change the SIM PIN as instructed.
- If you switch on the phone and LED 1, LED2, LED3 light, your SIM card is locked. You must contact your Service Provider for a PUK code to unlock it. Insert the MYMO SIM in a normal handset and enter the code.

4 Maintenance

The MYMO has been designed for children between the ages of 4-9 and is made of hardwearing materials. However, please be advised of the following:

- Please do not touch the charging unit with wet hands.
- Please keep the handset dry and away from wet conditions such as rain, moisture and liquid bearing minerals. These conditions cause the circuits to corrode.
- Please keep the handset in a clean and dust free environment to prevent the removable parts of the handset to be damaged.
- Please keep the handset out of excessive heat or cold.
- Please handle the unit with care and ensure that it is not violently shaken.
- You can clean the handset with a dry cloth. Please refrain from using chemicals, detergents or other cleaning materials.
- Please do not coat the handset with any pigment or other foreign substances as this could adversely affect the handsets functions.
- Please do not modify the handset in any way.

5 Declaration

Please retain this manual for your use. Details within this manual were correct at the time of going to press, however, we reserve the right to alter the handset and it's manual without notice. The manufacturer and licensed retailers will accept no responsibility for the damages directly, or in directly resulting

from the mistakes, omissions of differences between the handset and the manual.

Our compensation for any loss incurred or any claim resulting from the operation of this handset is limited up to and not exceeding the purchase price of the original handset.

WARNING: MYMO is not a toy. Please ensure that children are not allowed to play with the removable parts of the phone or are allowed to put the handset in their mouth.

We shall assume no liability for any penalty, intended or accidental, indirect or consequential loss during the purchase or operation of the handset. This includes, but is not limited to loss in use and time, inconvenience, commercial loss, loss in profit and commercial opportunities, expense for replacement of goods and services, loss in investment and goodwill, lost data or a claim from a third party.

Under the maximum legal allowable range whether the manufacturer or retailer was informed of the possibility of the said loss, these restrictions shall remain effective.

For more details – please visit www.mymoshop.com